

Signatone CM-460 150 mm Semi-Automatic Probe System For reliable and accurate DC/CV-IV, High Power and RF Test Measurements

***** FEATURES / BENEFITS

Designed for a Variety of On-Wafer Analytical and Semi-Production Applications


- DC, CV/IV, pulsed –IV applications
- ➤ High Power Application up to 12KV /600A
- IC Design / test verification Ambient, +300°C
- RF applications up to 110GHz 2 & 4 port setup
- mmW 110GHz -1.5THz 2-Port


Product Versatility

- Designed for full or partial wafer probing
- Roll-Out stage for ease of wafer loading
- Active Vibration Isolation table (optional)
- Ambient, Hot (+25°C to +300°C) configurations

Options and Configurations

- Standard Platen Supports up to 10x DC MicroPositioners or 2x RF + 4 DC and/or 4.5" wide probe card
- Available in multiple configurations including a variety of chuck options, DC/RF/High Power positioners, Computer Aided Probes, microscopes, camera's, Dark Box's, lasers for various applications

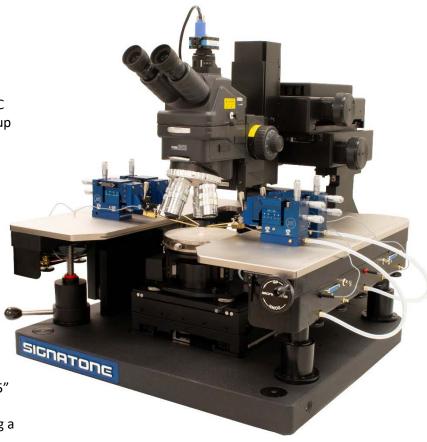

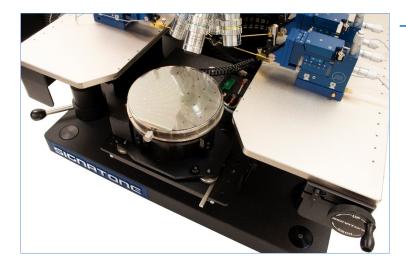

ROLL - OUT STAGE

- Roll-Out Stage designed for easy Loading and Unloading of Wafer Samples and single ICs
- Excellent for use with probe cards and multi probe/complex setups
- Allows easy access to AUX -chucks (optional)
- Lock and Un-Lock position indicator
- Presentation 75mm / 65%
- Easy access to vacuum-zone selector knob



SPECIFICATIONS

Chuck XY Stage (Programmable)

| Travel range | 152.4 mm x 152.4 mm (6 x 6 in) |
|----------------|---|
| Resolution | 0.5 μm |
| Accuracy | ± 2.0 μm* |
| XY stage drive | Closed-loop high precision linear motor |
| Speed | Variable Speed XY chuck stage control |

Max. movement speed 200 mm / sec.

Chuck Z Stage (Programmable)

| Travel range | 6 mm (0.25 in) |
|---------------------|-----------------------------------|
| Resolution | 0.25 μm |
| Accuracy | ± 2.0 μm |
| Repeatability | ± 1.0 μm |
| Z stage drive | Closed-loop micro stepper motor |
| Speed | Variable Mode and Speed selection |
| Max. movement speed | 15 mm / sec. |

Chuck Theta Stage (Programmable)

| Travel range | ± 9° (18°) |
|-------------------|---|
| Resolution | 0.000035° |
| Accuracy | < 1.0 µm (measured at the edge of the chuck) |
| Repeatability | < 1.5 μm |
| Theta stage drive | High resolution stepper motor, rotary encoder feedback system |

Roll Out / Loading Stage

| Travel range | 75mm |
|-------------------------------------|---|
| Presentation | 100mm /65% |
| Return repeatability | < 1μm |
| Motorized Microscope Stage (linear) | |
| Movement range | 50mm X 50mm (2"x2") |
| Resolution | 0.02μm (20 Nano meters) |
| Scope lift | 101 mm (4") Vertical Pneumatic (Motorized- optional) |
| Scope lift motorized (optional) | 50mm motorized + 50 mm pneumatic / combination = 101mm (4") |


f * All data relevant for use with Precision package



PROBE PLATEN

Specifications

| • | |
|------------------------------------|--|
| Material | Nickel Plated Steel (Al optional) |
| Dimension | $L = 580 \text{mm} \times W = 637 \text{mm} \times H = 12.7 \text{mm}$ (See drawing) |
| Chuck to Thermal Shield Separation | Min. 2 mm (Variable Separation with Fine Platen Adjust) |
| Max. No of Micro Positioners | 10x DC or 4x RF + 2x DC or 2x RF + 4 x DC or 4x RF + 4x DC |
| Quick Platen Lift Control (CVL) | Continuous Variable Lift (0 to 3.175 mm) |
| Contact Repeatability | < 1 µm (0.04 mils) by Manual Control |
| DC MicroPositioner mounting | Magnetic or Vacuum |
| RF MicroPositioner mounting | Magnetic or Bolt Down |
| Thermal Isolation (Optional) | Platen Temp = +15 °C to +40°C /chuck @ +300°C |
| | |

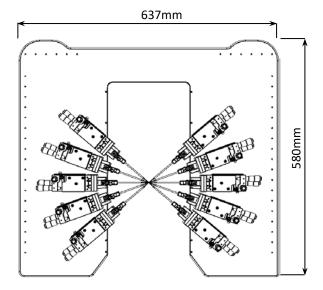

Sample 4: Probe Configured with 10 DC Probes

Sample 2: Probe Configured with 2 RF + 4 DC Probes

❖ ONE PLATEN x 4 BENFITS

Signatone Multi Benefit Ergonomically Correct Platen Adjust and Features:

- "Quick Lift" with CVL for easy probe to pad separation and alignment
- Fine Adjust" for Probe card and variable Chucks and DUT thickness setup
- "Position Lock" allows for secure "lock" of user defined platen height setup
- "Thermal Isolation" maintains a safe temperature of probes and platen surface while chuck is at extreme temperatures (optional)



Platen "Quick Lift"



Platen "Fine Adjust" and "Position Lock"



SYSTEM CONTROLS

The S1080 thermal chuck controller features touch screen commands, triple safety circuits, and 0.1° resolution.

Probe**M**aster software features thermal control from the probe station.

Hardware accessories including keyboards and mouse can be easily integrated into the table's instrumentation rack providing greater ease of use, ergonomics, and minimizing the overall system dimensions. System and thermal controllers may also be integrated.

Industry proven precision Joy Stick/ thumbwheel combination, intuitive selector panel for DUT, Microscope, and 1-4 Computer Aided Probes (CAP).

LED indicator for active device, Multi-speed thumbwheels offer sub-micron positioning.










SYSTEM SOFTWARE

Signatone's powerful navigation software **ProbeMaster** drives all Signatone semiautomatic probing systems. **ProbeMaster** simplifies navigation to a test site by using arrow keys, wafer graph or **point** and **shoot** on the live image. The optional vision control module includes **auto align**, **auto start**, **probe exact**, and **sure touch features**. Supports many popular interface protocols * **see supported software platforms**

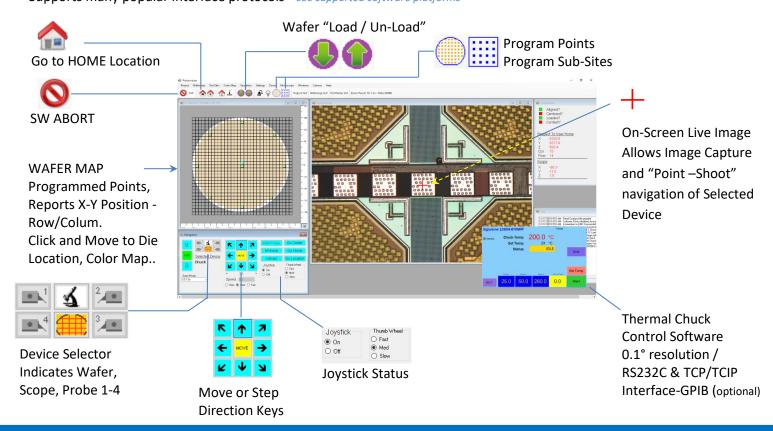



MICRO POSITIONER

Choose the Micro Positioner that's best for your application (more positioner configurations available)

The CheckMate Series probe stations include an Aluminum or Steel Platen for use with Vacuum or Magnetic based micro Positioners

- The S-926 Series with 100 TPI rectilinear X-Y-Z motion, good for probing down to one micron, at a very competitive price
- The SP-100 Series with 100 TPI linear X-Y-Z motion with in-line micrometer knobs for high precision probing onemicron features at high magnification – great for use with multi probe applications
- The SP-150 Series with 100 TPI linear X-Y-Z motion with in-line micrometer knobs for ultra precision probing submicron features at high magnification – great for use with multi probe applications
- The S-M40 Series RF Positioner with 50 TPI linear X-Y-Z motion with in-line precision knobs for quick and accurate positioning of RF probes great for use with RF and Wedge probe applications DC-110GHz.
- The S-M90 Series RF Positioner with 50 TPI linear X-Y-Z motion with precision knobs at 90° for quick and accurate positioning of RF probes great for use with RF and Wedge probe applications DC-110GHz.
- The CAP-946 Series Motorized Positioner with Software controlled X-Y Z 20nm resolution. Including 25mm X-Y travel (8mm "Z") Software, Joys Stick & Thumbwheel Control (excellent for use with Dark box or Gove box applications)





❖ DC PROBE –SELECTION GUIDE

| | Coax Probe (C) | Triax Probe (T) | Kelvin Probe (K) |
|---------------------------|------------------|------------------------------|---------------------|
| Max voltage | 500 V | 500 V | 500 V |
| Temperature range | -60 °C to 300 °C | -60 °C to 300 °C | -60 °C to 300 °C |
| Leakage current | < 50fA | < 20fA | < 20fA |
| Connectivity | BNC | Standard Triax | SSMC |
| Connectivity type | Single Coaxial | Single low noise Triaxial | Force/Sense Coax |
| Characteristics impedance | 50 Ohms | 50 Ohms | 50 Ohms |
| Residual capacitance | < 80fF | < 80fF | < 80fF |
| Probe holder material | Brass | Brass | Brass |
| Probe tips material | Tungsten | Tungsten | Tungsten |
| Probe tips sizes | 0.5 μm – 25 μm | 0.5 μm – 25 μm | 0.5 μm – 25 μm |
| Minimum pad size | 25 μm x 25 μm | 25 μm x 25 μm | 25 μm x 25 μm |








Coax Probe Triax Probe Coax Kelvin Probe

❖ High Voltage/High Current PROBE –SELECTION

| | | High Voltage Probes | S | High Current Probe |
|-------------------|-----------------------------------|-----------------------------------|------------------|---------------------------|
| Model | HVP-CX-3 | HVP-TX-3 | HVP-CX-10 | HCP 100 |
| Max Voltage | 3 kV | 3 kV | 10 kV | 500 V |
| Max Current | 1 A DC/30 A Pulsed | 120 mA DC | 20 mA DC | 10 A DC/100 A Pulsed |
| Temperature Range | -60°C to 300°C | -60°C to 300°C | -60°C to 300°C | -60°C to 300°C |
| Leakage Current | < 200 pA @ 3 kV, < 5 pA @ 10 V | < 1 pA @ 3 kV, < 100 fA @ 10 V | < 100 pA @ 10 kV | N/A |
| Connector Type | SHV | HV Triax | UHV Coax | HV Banana |
| Replaceable Tip | Yes | Yes | Yes | Yes |
| Probe Material | W | W | W | BeCu or W |





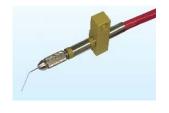



HVP-TX-3 HVP-CX-10

HCP-100

^{*}All leakage tests conducted in an enclosed environment with Keithley 4200, or equivalent, in sampling mode with 10 PLC, auto-ranging. 0.25s interval



❖ RF PROBE –SELECTION GUIDE



Cable Interface

| | SP-40A | SP-50A | SP-67A | SP-110H | SP-145 |
|--------------------------|-------------|-------------|-------------|-------------|------------|
| Frequency | DC-40GHz | DC-50GHz | DC-67GHz | DC-110GHz | DC-145GHz |
| Connector | 2.92mm | 2.4mm | 1.85mm | 1.0mm | 0.8mm |
| Tip Configuration | GS/SG/GSG | GS/SG/GSG | GS/SG/GSG | GS/SG/GSG | GSG |
| Pitch Range | 50μ - 2540μ | 50μ - 1250μ | 50μ - 1250μ | 50μ - 1250μ | 50μ - 200μ |
| Insertion Loss | <.8db | <1.0db | <1.1db | <1.5db | <1.75db |
| Return Loss | > 18db | >18db | >14db | >15db | >15db |











Calibration Substrates

| Cambration Substit | acco | | | |
|--------------------|-------------------|-------------|--------------|---------------|
| GSG | SP-CS-5 | SP-CS-9 | SP-CS-10 | SP-CS-18 |
| Pad Size | 50μ Χ 50μ | 100μ Χ 100μ | 150μ Χ 150μ | 300μ Χ 300μ |
| | 100μ Χ 100μ | | | |
| | 150μ Χ 150μ | | | |
| Pitch Range | 75μ - 250μ | 250μ - 600μ | 600μ - 1250μ | 1250μ - 2540μ |
| | | | | |
| GS/SG | SP-CS-8 | SP-CS-14 | SP-CS-11 | SP-CS-17 |
| Pad Size | 50μ Χ 50μ | 100μ Χ 100μ | 150μ Χ 150μ | 300μ Χ 300μ |
| | 100μ Χ 100μ | | | |
| | 150μ Χ 150μ | | | |
| Pitch Range | 50μ - 200μ | 200μ - 400μ | 400μ - 1250μ | 750μ - 2540μ |
| | | | | |
| GSG > 110GHz | SP-CS-15 | | | |
| Pad Size | 25μ Χ 25μ | | | |
| Pitch Range | 40μ - 150μ (SOLT) | | | |
| | 30μ - 150μ (LRM) | | | |



RF Cables

| | RFC-40 | RFC-50 | RFC-67 | RFC-110 |
|-------------------|-----------------|---------------|-----------------|---------------|
| Frequency Range | DC - 40GHz | DC - 50GHz | DC - 67GHz | DC - 110GHz |
| Length | 4 Ft. | 4 Ft. | 3 Ft. | * |
| Connectors | 2.92 M – 2.92 F | 2.4 M – 2.4 F | 1.85 M - 1.85 F | 1.0 M - 1.0 F |
| * Contact Factory | | | | |



❖ NON-THERMAL CHUCKS

Standard Wafer Chuck

| Connectivity | Coax BNC (m) |
|--|--|
| Diameter | 152.4 mm |
| Material | Nickel Plated Brass (gold optional) |
| Chuck surface | Zone selector knob with Peppered vacuum patterns |
| Vacuum hole pattern sections(diameter) | 22mm, 50mm, 91mm, 135mm, |
| Vacuum actuation | Selector Knob allows individual activation of vacuum zones |
| Supported DUT sizes | 25mm, 75mm, 100mm, 150mm |
| Surface planarity | ±6.5µ |
| Rigidity | $<3\mu$ / 10N at edge of the chuck |

Electrical Specification (Coax)

| Operation voltage | Designed for operation at -200V to + 200VDC |
|-----------------------------------|---|
| Maximum voltage between chuck top | 500 V DC |
| and GND | |
| Isolation | > 150 GΩ |

Wafer Chuck (Triaxial)

| Connectivity | Triax (m) | |
|--|--|--|
| Diameter | 152.4 mm | |
| Material | Gold Plated Brass | |
| Chuck surface | Independent Vacuum zones with vacuum rings | |
| Vacuum hole pattern sections(diameter) | 0mm, 65mm, 112mm | |
| Vacuum actuation | Multi-Zone Adjustable Control | |
| Supported DUT sizes | 3mm, 75mm, 125mm, 150mm | |
| Surface planarity | ± 3 μm | |
| Rigidity | <3μ / 10N near at edge of the chuck | |

Electrical Specification (Triax)

| Chuck isolation | Measured @ 10V DC |
|-----------------|-------------------|
| Force to guard | > 2 TΩ |
| Guard to shield | > 7 TΩ |
| Force to shield | > 15 TΩ |

Auxiliary Chuck - Optional

| Quantity | 2 AUX chucks |
|------------------------|--|
| Position | Independently isolated (located on back left and right) |
| Substrate Size (L x W) | Max 25mm x 25mm (1"x 1") |
| Material | Ceramic, Ultem, or NI plated brass |
| Surface Planarity | ≤± 5 μm |
| Vacuum Control | Controlled independently, separate from wafer chucks |



SIGNATONE THERMAL CHUCKS

| Typical Specifications of Signatone Thermal Technology | Typical Specifications | of Signatone | Thermal Technology |
|--|------------------------|--------------|--------------------|
|--|------------------------|--------------|--------------------|

| Temperature Range | 150mm Standard Hot +25 °C to +300 °C | 150mm Hot/ Triax +25 °C to +200 °C | 150mm Hot/ 3kV Triax +25 °C to +200 °C |
|--|--|--|--|
| Connectivity | Coax (m) | Triax (m) | SHV Triax (m) |
| Temperature control method | Liquid Cooled / Resistance heater | Liquid Cooled / Resistance heater | Liquid Cooled / Resistance heater |
| Coolant | Water | Water | Water |
| Smallest temperature selection step | 0.1 °C | 0.1 °C | 0.1 °C |
| Chuck temperature display resolution | 0.01 °C | 0.01 °C | 0.01 °C |
| External touchscreen display operation | Yes | Yes | Yes |
| Temperature stability | ±0.1 °C | ±0.1 °C | ±0.1 °C |
| Temperature accuracy | ±0.5 °C | ±0.5 °C | ±0.5 °C |
| Control method | Low noise DC/PID | Low noise DC/PID | Low noise DC/PID |
| Interfaces | RS232C | RS232C | RS232C |
| Optional Interfaces | GP-IB | GP-IB | GP-IB |
| Chuck surface plating | Nickel | Gold | Gold |
| Temperature sensor | RTD | RTD | RTD |
| Temperature uniformity | ±0.5 °C at ≤ 200 °C ±1.5 °C at > 200 °C | ±0.5 °C at ≤ 100 °C ±2.5 °C at 200 °C | ±0.5 °C at ≤ 100 °C ±3.5 °C at 200 °C |
| Surface flatness | < ±10 μm | < ±8 μm | < ±15μ |
| Electrical isolation - Coax BNC (m) / SHV Triax | 150nA | > 5TΩ | > 5TΩ |
| Heating Rates | 25°C to 300°C < 12 min | 25°C to 200°C < 9 min | 25°C to 200°C < 22 mir |
| Cooling Rates | 300°C to 25°C < 9min | 200°C to 25°C < 8min | 200°C to 25°C < 8min |
| Leakage @ 10 V Kelvin Triax | N/A | <25fA | <400fA |
| Residual Capacitance | · · | <200fF | <1pF |
| Maximum voltage between chuck top and GND | 500V | 500V | 3kV |
| 3 Safety Circuits | Yes | Yes | Yes |
| Vacuum Pattern | Rings | Pin hole or Rings | Pin hole |
| Vacuum Zone (DUT Size) | 2,50, 100, 150mm | 2, 50, 100, 150mm | 2, 50, 100, 150mm |

System Controller / Dimensions / Weight / Power Consumption

| System Model | W x D x H (mm) | Weight (kg) | Weight (Lbs.) | Power cons. (VA) |
|--------------|-----------------|-------------|---------------|------------------|
| S-1080 | 432 x 483 x 267 | 20.4 | 45 | 2000 |
| TC-II | 355 x 711 x 610 | 50.8 | 112 | 1500 |



SYSTEM OPTIONS – ACCESSORIES

Probe Station Dark Box (PSDB-CM)

Probe Station light tight, electrically shielded enclosure Excellent for use in conjunction with the following:

- Low-Leakage measurements
- High-Power measurements
- Thermal measurements
- Light-Sensitive measurements

Door and Panel interlock options are typically used for High Voltage and High Temperature safety



Probe Card Adapter (S-4720)

For use with 4.5" wide probe cards

- Includes card rotation




CM-BMVC-6

Board Mount Vice Chuck

The CheckMate 460 Series probe station supports the 150mm x 150mm adjustable Vice chuck

For clamping various size and shaped devices, packaged parts, PCB's, single chips, MEMS, BioMEMS or virtually anything you want to hold, view, and probe.
(MCE Clamps are non-conductive LUTEM)

(VICE Clamps are non-conductive ULTEM)

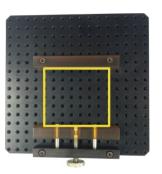

CM-BMVC-6


M-VAC


AC Linear Piston – (Small) Quiet Vacuum Pump

Supports vacuum hold-down of DUT and mounting of 1-10 Micro-positioners

(11 in. Hg @ 115VAC /428 mbar @ 230V AC)

Includes Power Cord, On/Off Switch, 10' flexible vacuum tubing, 5Amp Fuse, Vibration dampening feet, Easy grip handle

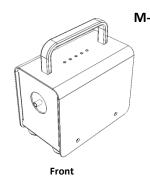

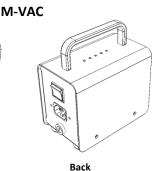





SYSTEM DIMENSIONS – TABLE OPTIONAL

CM-460 / including microscope*

| Dimensions (L x D x H) | 636 x 889 x 610mm | (25" x 35" x 24") | |
|------------------------|-------------------|-------------------|--|
| Weight | 109kg | (240 lbs.) | |

^{*} Can vary dependent on microscope selection

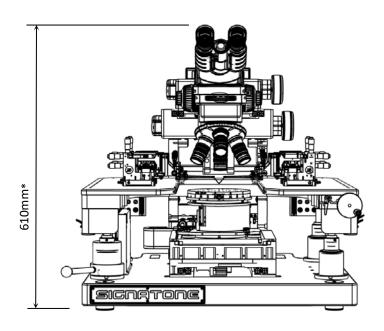

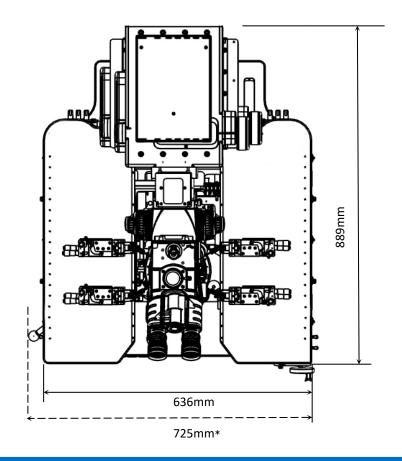





SYSTEM DIMENSIONS INCLUDING TABLE


CM-460 / Vibration Isolation Table / Monitor and Keyboard Mount

Dimensions (L x D x H) 863x 1085 x 1424 mm (34 x 42.7 x 56 In)
Weight 450 kg (995 lbs.)

^{*} Can very dependent on monitor, keyboard (roll out drawer) position and Microscope selection

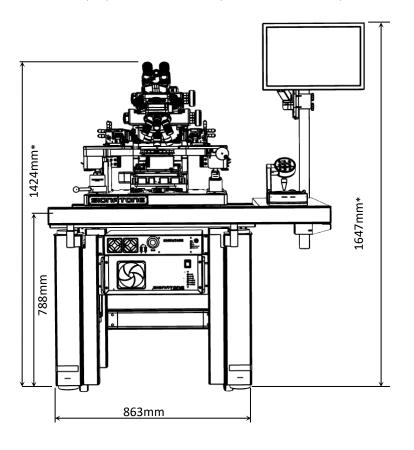

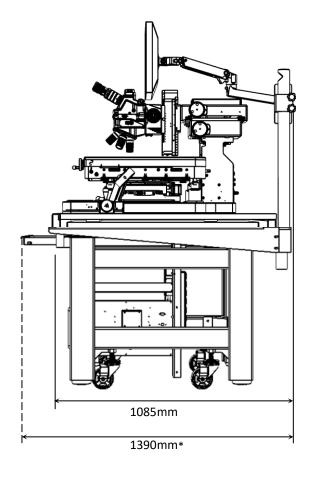

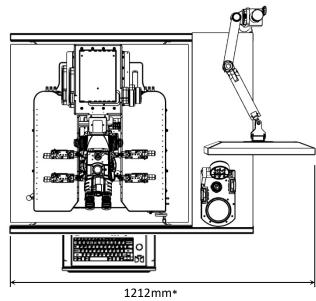





❖ SYSTEM DIMENSIONS INCLUDING DARK BOX


CM-460/PSDB/Vibration Isolation Table/Monitor and Keyboard Mount


| Dimensions (L x D x H) | 936 x 1085 x 1820 mm | (36.85 x 42.7 x 71.7 ln) | |
|------------------------|----------------------|---------------------------|--|
| Weight | 510 kg | (1125 lbs.) | |


^{*} Can very dependent on monitor, keyboard, and dark-box door position

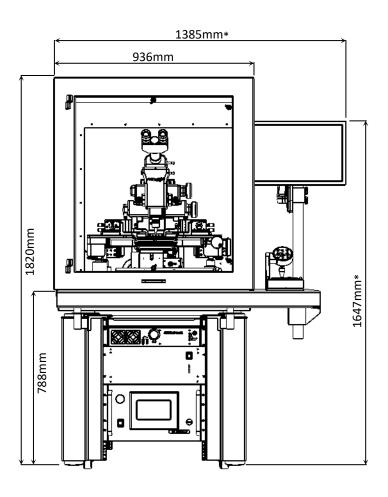

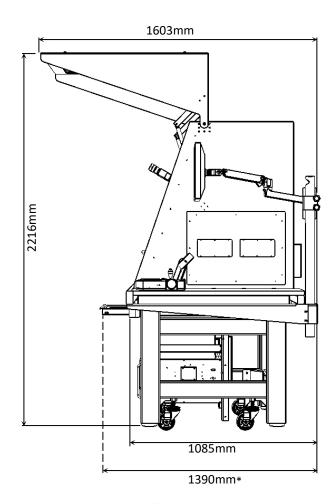

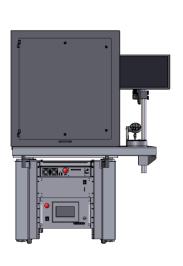

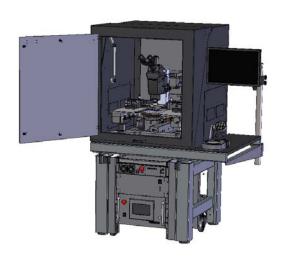


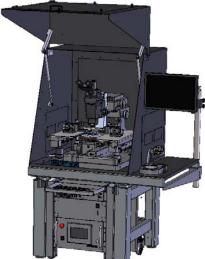



WARRANTY

- Standard Warranty 12 months *
- For Extended Warranty and Service Contracts: Contact Signatone Corp. for more information
- * See Signatone Corporate Terms and Conditions of Sale for further details.

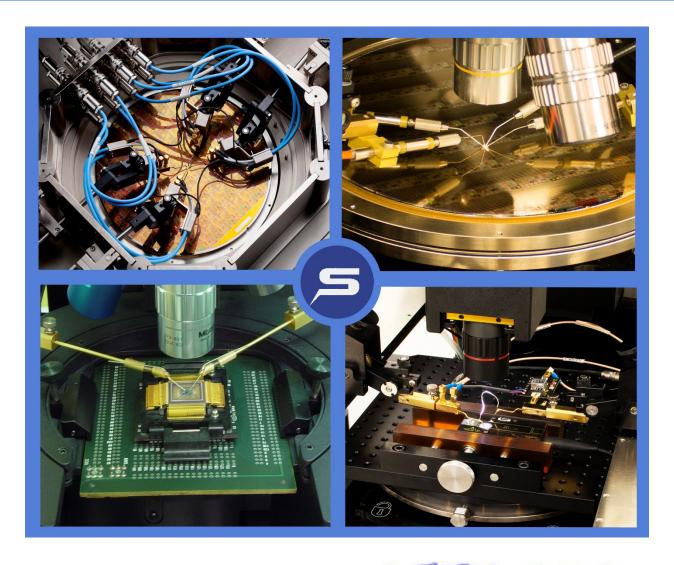



Europe: Sales.Europe@signatone.com

Asia: <u>Sales.Asia@signatone.com</u>

